


Assembly instructions tables


from Pickawood



Assembly

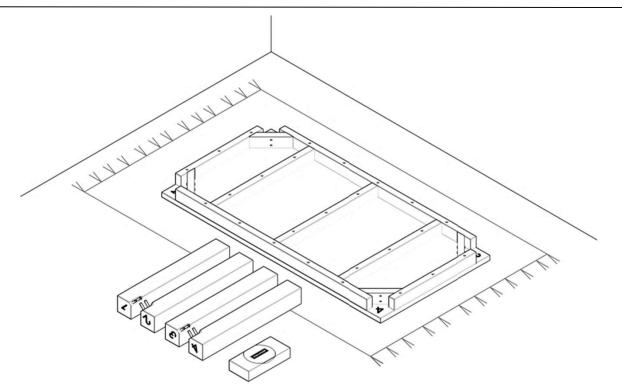



When assembling the table, a 2-person assembly is recommended. It is also advisable to unpack all parts at the beginning and place them in front of you. Place a pad under the tabletop to prevent damage to the floor and your table. Place the table top face down.

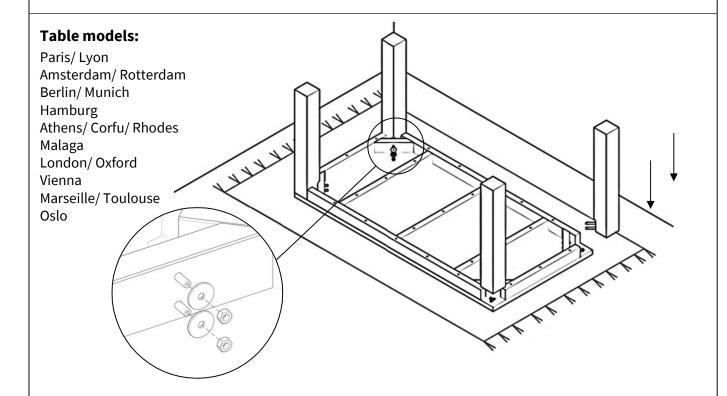


For these table models:

Using the numbers, install the table legs in the corresponding position and pass the threaded rod(s) through the space provided. From the inside of the table top, place the washer and then the nut (see picture) to assemble securely. Tighten with a spanner.

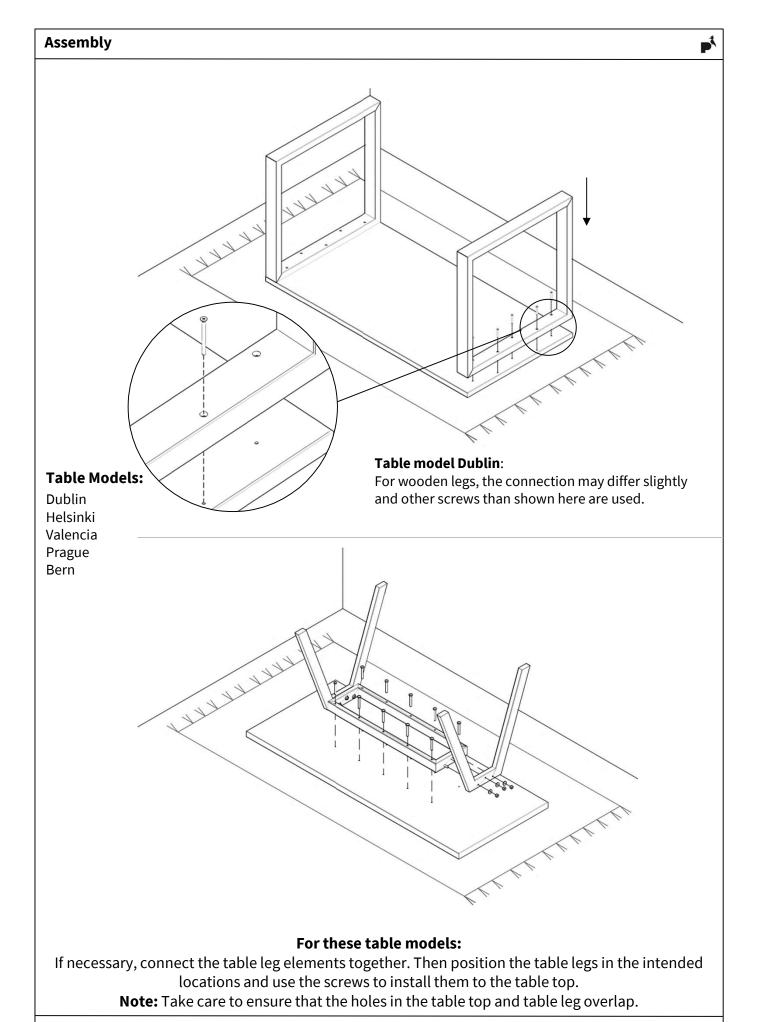

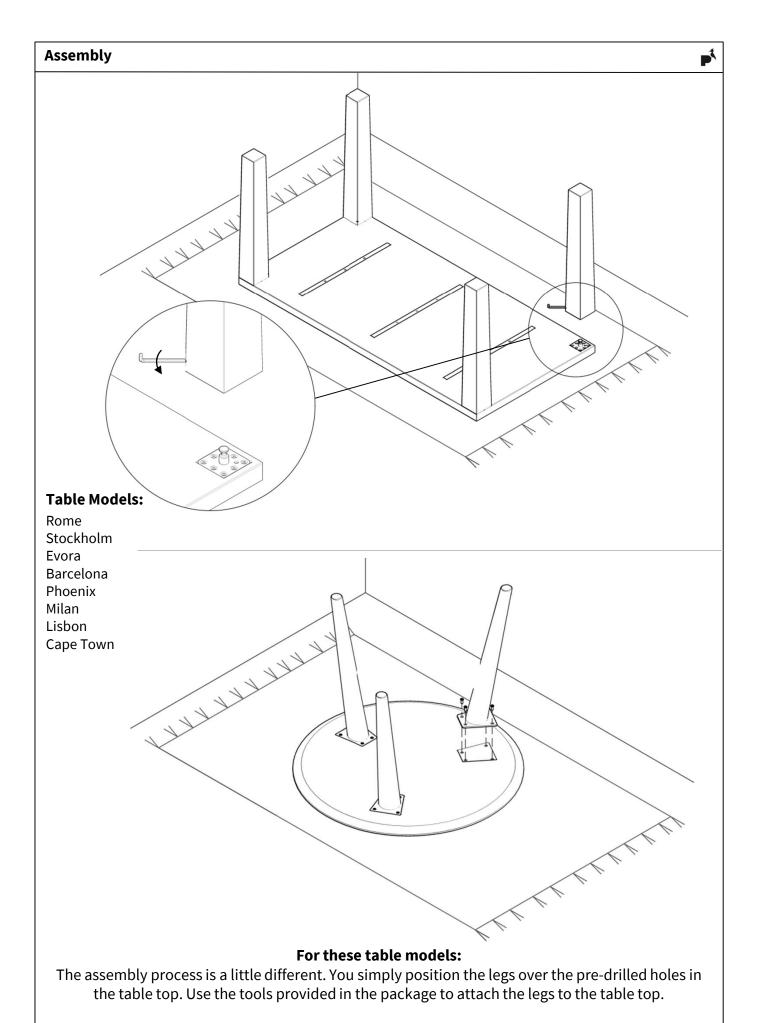


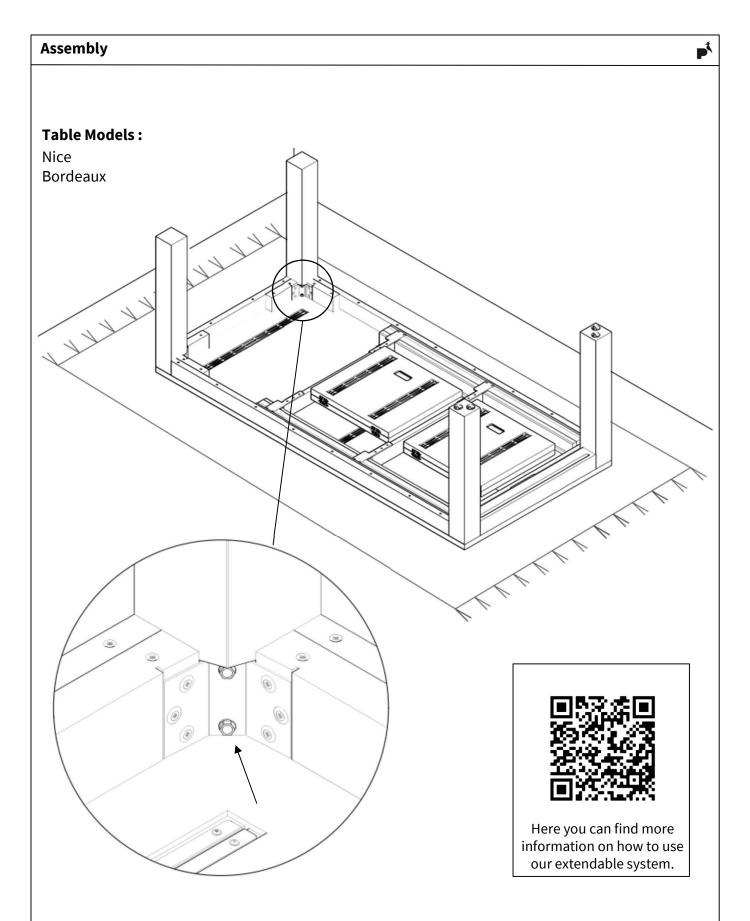

Our **extendable table models** are delivered in two parts (table top and legs). Simply screw the legs to the table top with a suitable spanner.


Once the installation is complete, turn the table over with the help of another person. Using the lever under the table top, you can extend the table and install your table extensions.



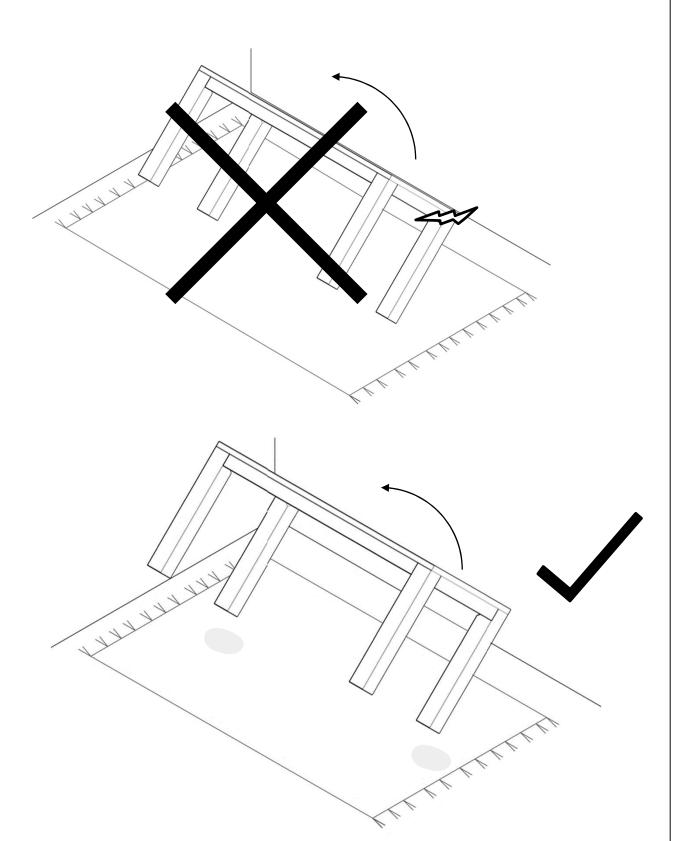

Always seek the assistance of another person to help you turn your table over and be careful not to tip the table over the legs. First, lift the table and turn it in the air to prevent causing damage.


Assembly

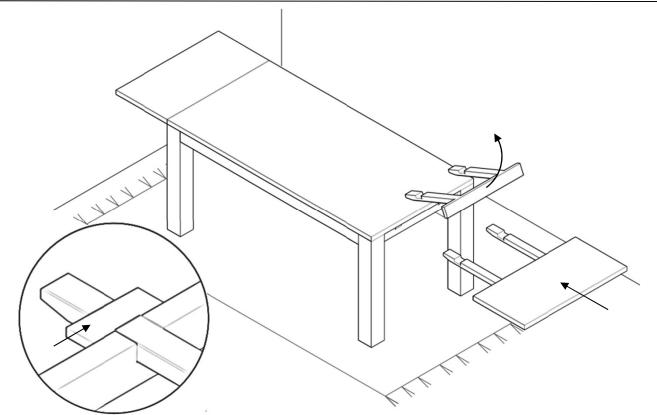


If you have ordered a **table extension(s)**, you must first remove the panels in the tabletop frame.

Then you can insert the extension into the holes in the frame.

Fix the extension with wooden wedges to achieve greater stability.

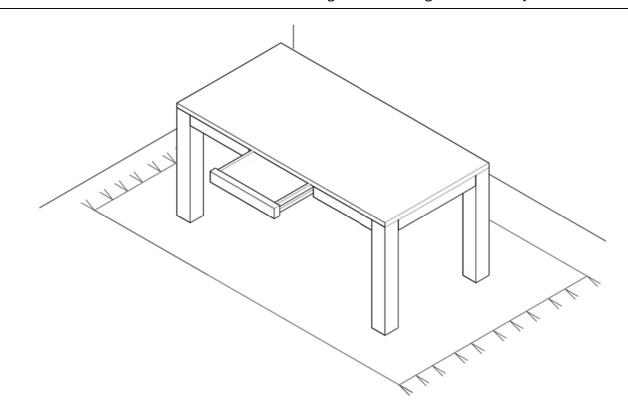


If you have added a **drawer** to your table, it will be installed in the table top and ready to use as soon as it is delivered. The drawer is equipped with wooden dowels to prevent it from slipping out of the table frame.

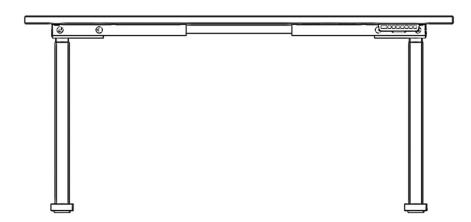


Hight adjustable Table

by Pickawood

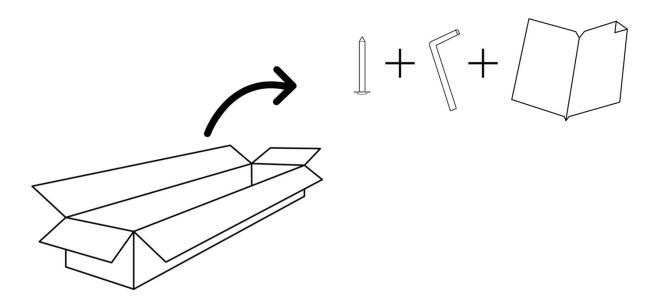


The first step is to assemble the height-adjustable table frame. To do this, use the accompanying assembly instructions as an aid.

The assembly instruction is in the package of the table frame. The assembly materials required for assembly (screws and tools) are also included in the package.

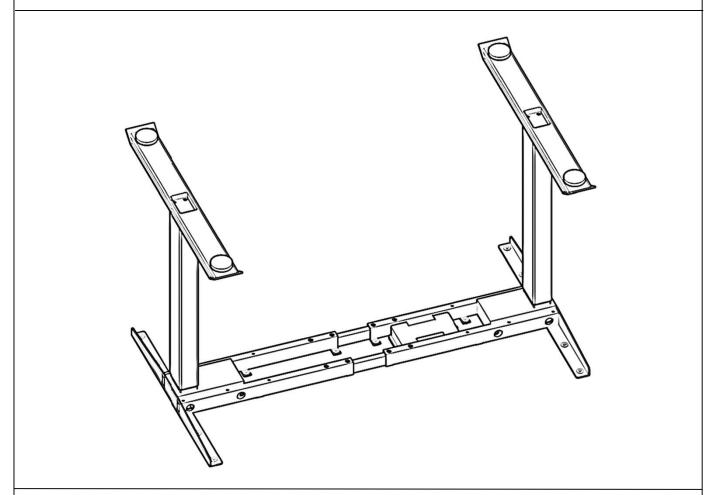


In the second step, the tabletop is connected to the table frame. To do this, the tabletop is first placed on the floor with the top side down.



Use the packaging material as a base to protect both the tabletop and the floor from scratches.


Now position the table frame as desired on the underside of the tabletop. In doing so, the dimension "x" does not exceed 200 mm.

A second person is recommended to help position the frame on the tabletop.

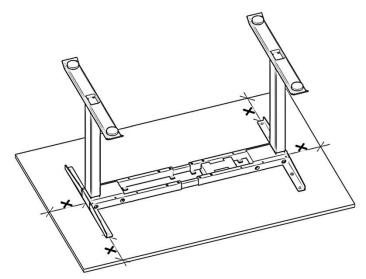


The frame is then attached to the underside of the tabletop with the appropriate screws. The supports of the frame have holes provided for this purpose.

Pre-drilling in the tabletop is recommended for solid wood, the top supports do not cover the burr strips!

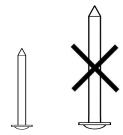

For materials with a thickness of 20 mm, please use the corresponding short screws supplied with the tabletop.

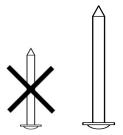


For materials with a thickness of 30/40 mm, please use the correspondingly longer screws supplied with the table frame.

In the third step, the tabletop is equipped with the remaining electronics and add-ons and the entire table is brought into its final position.

To do this, place the individual components in the desired position on the bottom of the tabletop and screw them on.


The cables are to be sorted with the enclosed cable ties.

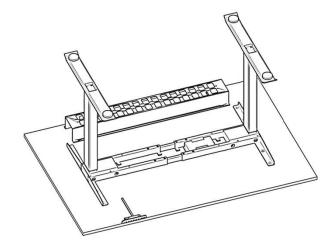

For the cable tray, additional short screws are enclosed with the tabletop!

The frame is now turned over together with the tabletop and set up.

It is recommended to take a second person for help. The table should be turned in the air and not tilted to the floor to avoid possible damage.

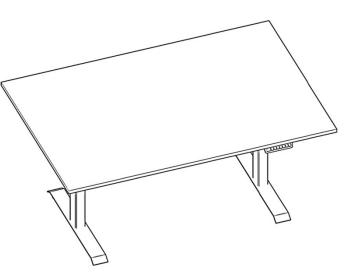

Finally, the optional cable outlet is inserted from above into the hole provided for it in the tabletop.

Assemble - Notes	₽ [₹]
Pickawood assembly instructions for tables	12
· · · · · · · · · · · · · · · · · · ·	

Assembly instructions - tables If you have any questions, you can reach us via email or telephone. We will be happy to help you!

4

PICKAWOOD

Mail: support@pickawood.com

Telefon: 0330 808 4870

Web: www.pickawood.com

Amsinckstraße 34, 20097 Hamburg, Germany